



ANTI-LOST SMART DEVICE SET-UP INSTRUCTIONS

This anti-loss device is a low power product based on Bluetooth 4.0. Through the special APP software on the mobile phone end, users can tie up easily lost items (such as keys, handbags, etc.) to prevent the loss of items; even you can hang the anti-loss device on the children to ensure that the children are in your sight; or hang on your pet, you don't have to worry about them missing.

1、 On / Off

- Turn on: After about 3 seconds of long press, the "Buck-Buck" three-tone prompt sound, the indicator light flickers fast for 10 seconds, and then shuts down every 2 seconds under the operation of no connection and no button to continue flickering for 30 seconds.
- Turn off: After pressing for about 3 seconds, drop a long reminder sound, and the light goes out.

2、 Add equipment


- Turn Bluetooth on your mobile phone, go to APP, skip the boot interface, and go directly to the Add Device interface.




- Click on the "Add device" icon in the interface and it appears as shown in the figure.




- After searching for a new device, as shown in the figure, click and connect automatically. (The device name can also be edited as needed)

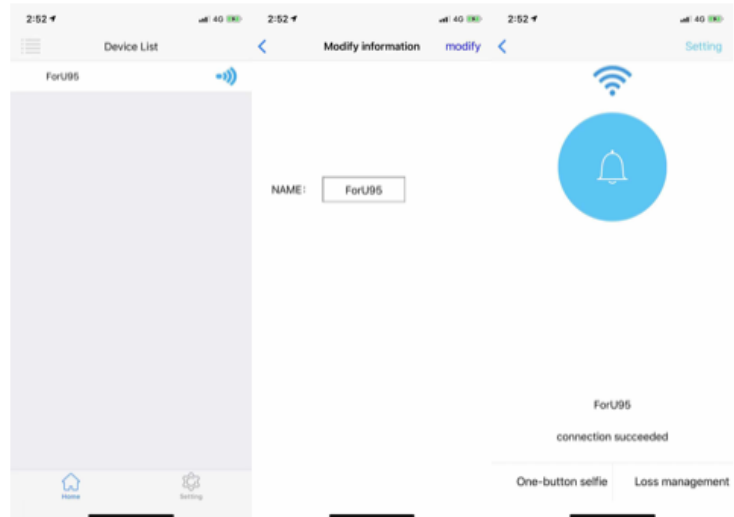

- After connecting, click the alarm icon, as shown in the figure, you can hear the "drop" alarm sound of the lost-proof device, and then you can find the lost-proof device. The "drip" sound can be called continuously. If you click on the alarm icon again, the sound stops.

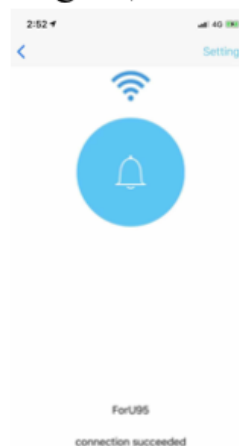

- In the main interface, click "Settings" in the upper right corner, and enter the settings interface, you can alarm the leader to select, check the power consumption of equipment and other operations, as shown in the figure;

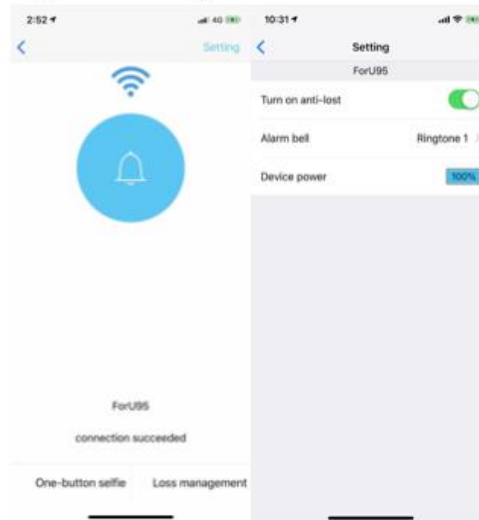

- Switch to the "Settings" interface in the list. Double-click options can be set to view recording files and obtain version information, etc. as shown in the figure.;




3、 Photograph

The self-timer function can be realized by using one-click self-timer function and clicking the anti-loss device.



4、 Loss management

The range of locatable devices that have been lost is shown in the following figure. The location function of loss management can only reserve the location of disconnection when the loss preventer disconnects from the mobile phone, and locate the location record in "lost record". To use this function, you need to turn on GPS and keep your mobile phone connected to the network.

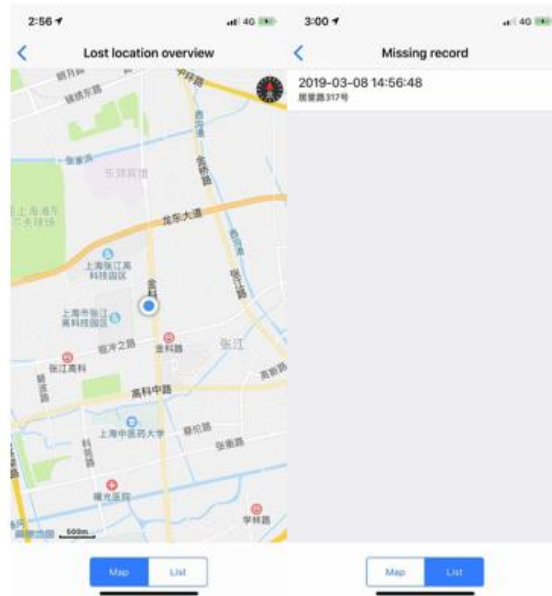

5、 Help

1、 Why can't a lossless device connect to a smart device, such as a mobile phone or a tablet?

- A. Please confirm whether the battery is installed or whether it is electrified.
- B. Please close the anti-loss device to the smart device.
- C. Restart Smart Device or Restart APP and Retry

2、 Why does the anti-loss device alarm frequently?

- A. Check whether the battery is in good contact.
- B. Whether the settings are correct or not

3、 How far is the effective distance of the anti-loss device?

A. After connecting with intelligent devices, the default distance is about 15 meters, the open environment can reach about 30 meters, and the partition wall may be about 10 meters.

B. Due to the difference of actual use environment, the distance may be different, so it is strongly recommended that the anti-loss device should not be placed in places where signal attenuation may occur, such as thick jackets.

4、 What should we do when we find that the anti-loss device is missing?

A. Open APP, enter the location option, and view the missing location

- B. Seek help from other Loss Prevention Users

5、 I've tried all kinds of ways. Is the anti-loss device still not working properly?

- A. Please contact the manufacturer or distributor